


SRI 60

protection end cap

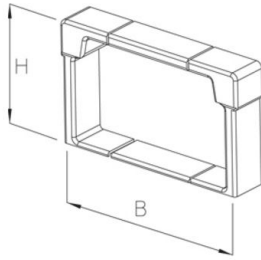

The protective cap is provided with predetermined breaking points for easier separation. For mounting on a filled RI the base is interrupted.

To mount an SRI 60-05, the protective cap must be opened and the middle parts of the protective cap removed. To mount an SRI 60-15, the protective cap must be opened and the SRI-EU 50 must be mounted on the lid and the SRI-EU 50 on the base in between. To mount an SRI 60-20, the protective cap must be opened and two SRI-EU 50 must be mounted on the lid and two SRI-EU 50 on the base in between. To mount an SRI 60-30, the protective cap must be opened and four SRI-EU 50 must be mounted on the lid and four SRI-EU 50 on the base in between.

Polyethylen

Product	H	B	G
SRI 60-05	60 mm	50 mm	0,01 kg
SRI 60-10	60 mm	100 mm	0,01 kg
SRI 60-15	60 mm	150 mm	0,02 kg
incl.:			
1x SRI-EO 50		protection end cap	
1x SRI-EU 50		protection end cap	
SRI 60-20	60 mm	200 mm	0,02 kg
incl.:			
2x SRI-EO 50		protection end cap	
2x SRI-EU 50		protection end cap	
SRI 60-30	60 mm	300 mm	0,03 kg
incl.:			
4x SRI-EO 50		protection end cap	
4x SRI-EU 50		protection end cap	

H: height
B: width
G: weight



DETAILS / APPLICATIONS

